


Koodi lähtestamine:

Turvalisuse huvides soovitame koodi enne kasutamist lähtestada (tehase parool on "0-0-0-0")

1. Kasutage lameda peaga kruvikeerajat, et eemaldada joonisel märgitud kork
2. Sisestage tehase kood, liigutage riiv noolega märgitud suunas (vt.joonis nr 1), tõstke seejärel käepide nupust üles ja liigutage riiv lõpuni (vt.joonis nr 2)
3. Pöörake paroolirattal endale sobilik neljakohaline kood.
4. Tõstke käepide nupust üles, liigutage riiv tagasi algasendisse (vt.joonis nr 3). Pange kork tagasi esialgsele kohale. Seadistamine on lõpetatud.

Kasutamine:

- ◆ Avamine: valige õige kood, liigutage riivi käepidemest ja see avaneb.
- ◆ Lukustamine: valige õige kood, liigutage käepidemest tihvt lukuavasse, seejärel ajage koodistik uuesti segamini.

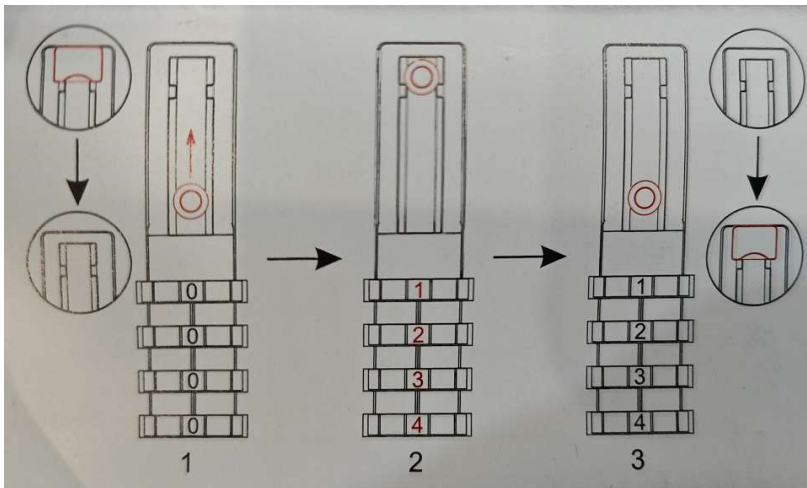

Reset Password:

Please reset the password for the first use (The factory password is "0-0-0-0")

1. Use a flat-head screwdriver to take out the plug as shown on the below drawing nr 1
 2. Insert the factory password and then lift the handle up to the code escape area (drawing nr 2)
 3. Turn the password wheel to set new password.
 4. Move the handle down from the code-changing area to the sliding area, and then insert the hole plug into the code-changing area as it was (drawing nr 3)
- The setting is complete.

How to use:

- ◆ Unlock: Dial the correct password, move the bolt, and it will open.
- ◆ Locking: dial the password correctly, insert the bolt pin into the lock hole, and change the password to lock.

